 




Toshiba NB250-108 RAM Replacement

Removing and replacing the RAM block

Written By: Guenter Hildebrandt

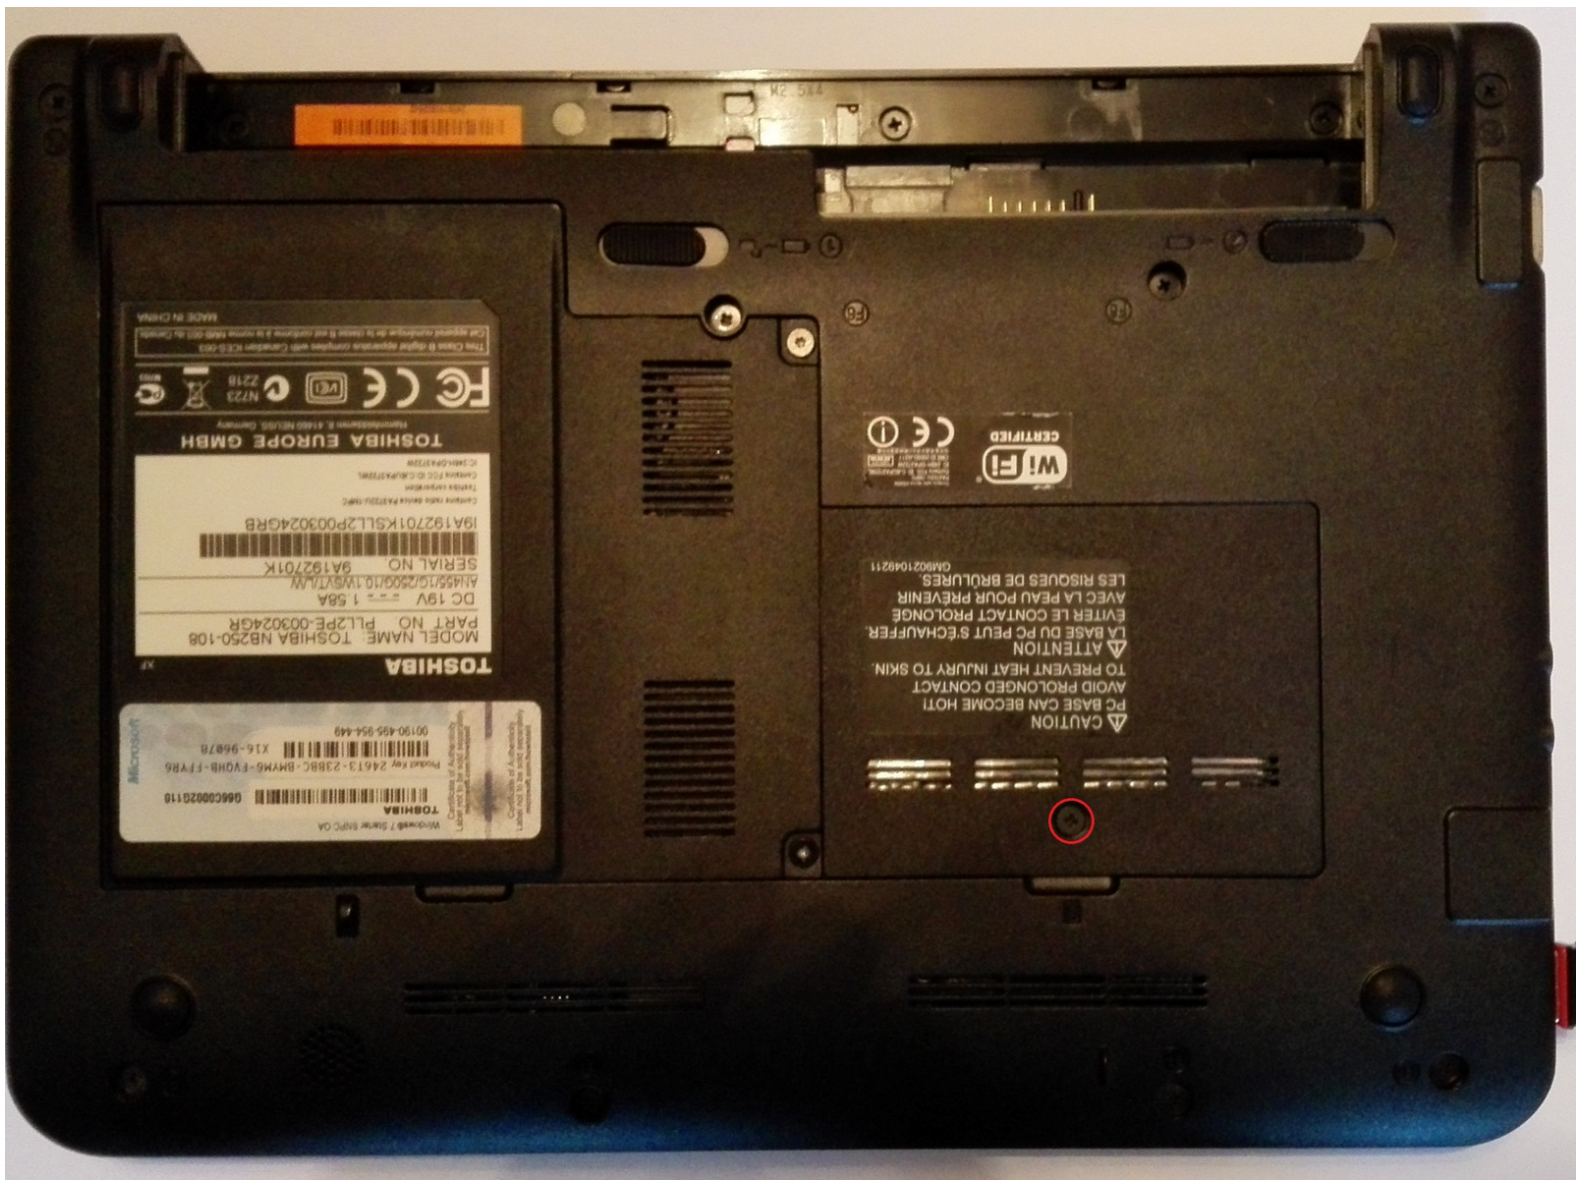

INTRODUCTION


Removing and replacing the RAM block



TOOLS:


- [Phillips # 1 screwdriver](#) (1)
-

Step 1 — Remove battery

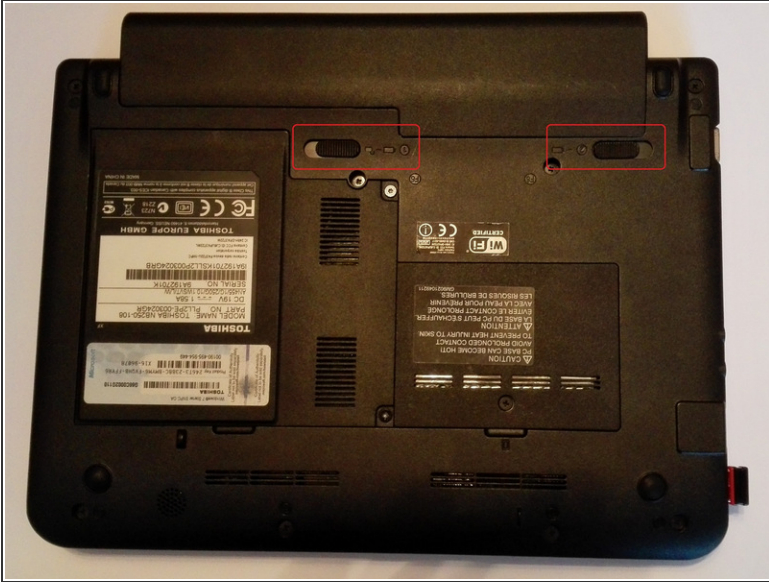

- Save your work.
- Turn off the computer. The LED power indicator is off.
- ⚠ Disconnect all cables connected to the computer and cable equipment.
- Close the display and place the computer upside down as shown in the picture down.
- Slide the safety lock (on the left) to the unlock position (to the left) to enable sharing.
- Slide the battery release latch (right) to the right and hold it in place in order to release the battery pack, and remove the battery pack to the back of the computer.

Step 2 — Remove RAM cover

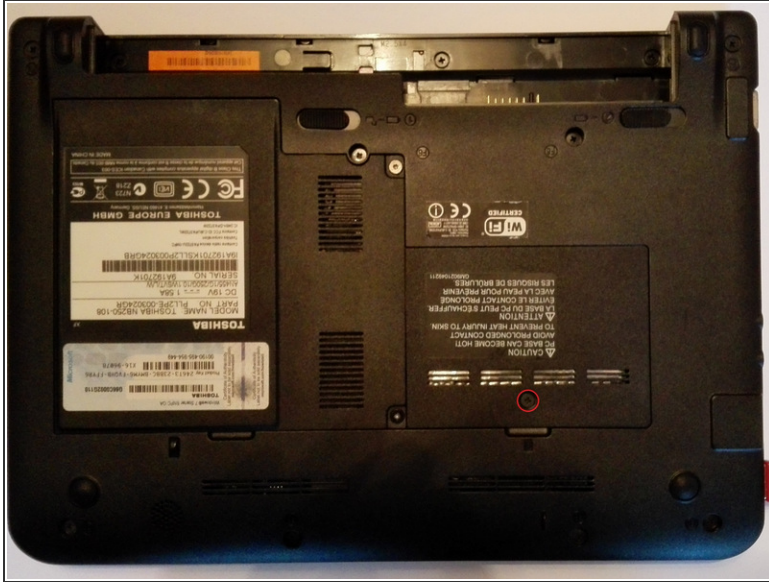

- Remove the screw with a Phillips # 1 screwdriver, which secures the cover of the memory module. To remove the cover, use the recess below the screw and lift the cover up.
- Now look at the RAM module in its socket. Press the two metal clips gently as far outwards until the module is free to decide about 30 degree jumps upwards.

Step 3 — Remove RAM



- Remove the RAM module by this take on the corners and drag to the right out of the socket.
- ⚠ Do not touch the gold contacts of the RAM block to him not to damage the hand.
- Place the RAM module securely on the work surface.

Arbeite die Schritte in umgekehrter Reihenfolge ab, um dein Gerät wieder zusammenzubauen.

This document was last generated on 2017-06-17 09:13:39 PM.